

37 Vacuum

38 Water/Waste

**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

CHAPTER 38

LIST OF PAGE EFFECTIVITY

CHAPTER SECTION SUBJECT	PAGE	DATE
38-EFFECTIVITY/CONTENTS	1	Aug 15/80
38-30-00	1 201	Aug 15/80 Aug 15/80

CHAPTER 38 - WATER/WASTE

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT	PAGE
WASTE DISPOSAL	38-30-00	1
Description and Operation		1
Maintenance Practices		201
Chemical Toilet Cleaning		201

"END"

**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

**WASTE DISPOSAL - DESCRIPTION AND
OPERATION**

The chemical toilet is located in the aft section of the

airplane and is concealed by a bench-type seat in place of the optional fifth and sixth seat. The toilet is on the RH side of the seat and is accessible by lifting the RH seat cushion. The toilet is of the standard dry chemical type.

"END"

**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

WASTE DISPOSAL - MAINTENANCE PRACTICES

CHEMICAL TOILET CLEANING

The toilet is of the standard dry chemical type. The toilet should be removed and emptied after each period of use. Any approved dry chemical may be used in accordance with the manufacturers instructions. A stiff (non-metallic) bristle brush and a water and detergent solution may be used to clean the toilet.

NOTE

For sanitary reasons, wear rubber gloves,

elbow length, any time the toilet is to be cleaned or emptied.

- a. Remove the RH seat cushion to gain access to the toilet.
- b. Pull the toilet seat away from the seat deck. The toilet seat is attached with velcro fasteners.
- c. Pull out the disposable waste bag and discard.
- d. Place a new disposable waste bag in the bowl, making sure the bag overlaps the top of the bowl.
- e. Place the toilet seat in position on the seat deck and press down in the area of the velcro fasteners.
- f. Put the RH seat cushion back in position.

"END"

