

53 Fuselage

**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

CHAPTER 53

LIST OF PAGE EFFECTIVITY

CHAPTER SECTION SUBJECT	PAGE	DATE
53 - EFFECTIVITY/CONTENTS	1	Oct 27/75
53-30-00	201	Oct 27/75
	202	Oct 27/75

CHAPTER 53 - FUSELAGE

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT	PAGE
Plates/Skins	53-30-00	
Maintenance Practices		201
Fuselage Access Openings		201

"END"


**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

PLATES/SKIN - MAINTENANCE PRACTICES

FUSELAGE ACCESS OPENINGS

provides maintenance access to the components, plumbing and cables enclosed within the fuselage. When installed, they continue the aerodynamic lines of the fuselage with little increase of drag.

The panels, plates and doors as shown in Figure 201,

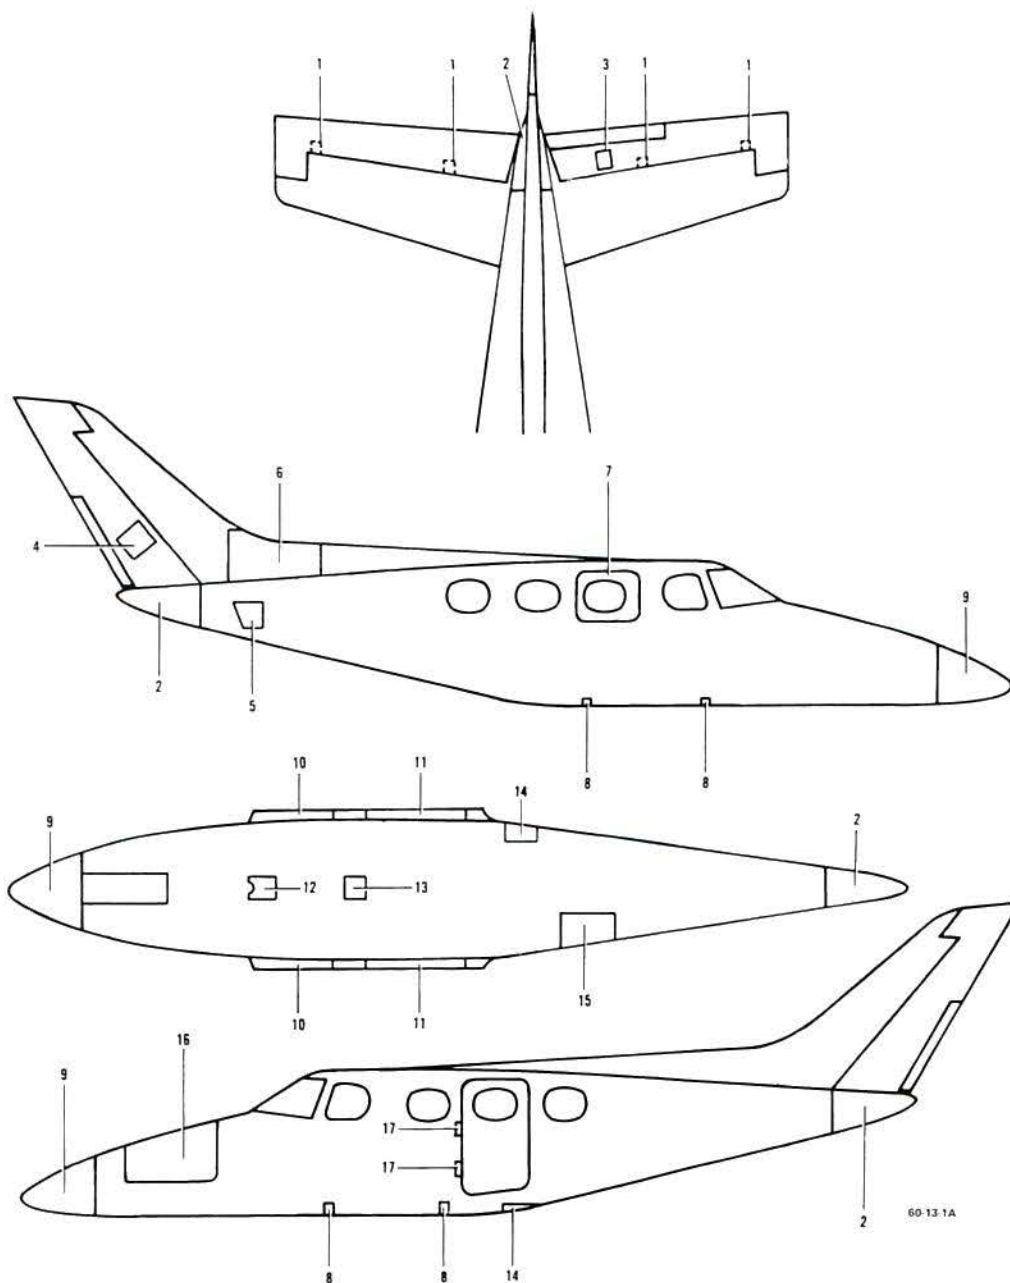

**Fuselage Access Openings
Figure 201 (Sheet 1 of 2)**

**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

- | | |
|---|---|
| 1. Elevator Hinges | 11. Uplock Cable, Retract Rods, Retract Rod Pressure Seals and Wing Stub Fuel Fittings |
| 2. Tail Cone | 12. Lower Pedestal |
| 3. Elevator Trim Tab Actuator | 13. Landing Gear, Gearbox and Actuator |
| 4. Rudder Trim Tab Actuator | 14. Assist Step Mechanism |
| 5. Deicer Dump Valve, Elevator Bell Crank, Rudder Bell Crank and Control Cables | 15. Autopilot Aileron, Rudder and Elevator Servos, Magnetic Navigation Sensing Element (B-5P Autopilot) and Autopilot Computer (H-14 Autopilot) |
| 6. Vertical Stabilizer Deicer Hose | 16. Oxygen Filler and Bottle, Heater, Ram Air Plenum, Brake Fluid Reservoir, Avionics Equipment and Baggage Compartment |
| 7. Emergency Exit | 17. Cabin Door Hinges |
| 8. Wing Bolts | |
| 9. Nose Cone | |
| 10. Intercooler | |

**Fuselage Access Openings
Figure 201 (Sheet 2 of 2)**

"END"