

6 Dimensions & Areas

**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

CHAPTER 6

LIST OF PAGE EFFECTIVITY

CHAPTER SECTION SUBJECT	PAGE	DATE
6-EFFECTIVITY/CONTENTS	1	Nov 2/73
6-00-00	1	Nov 2/73
	2	Nov 2/73


CHAPTER 6 - DIMENSIONS AND AREAS

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT	PAGE
DIMENSIONS AND AREAS	6-00-00	1
Description and Operation		1
Aircraft Dimensions		1
Stations Diagram		2


"END"

**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

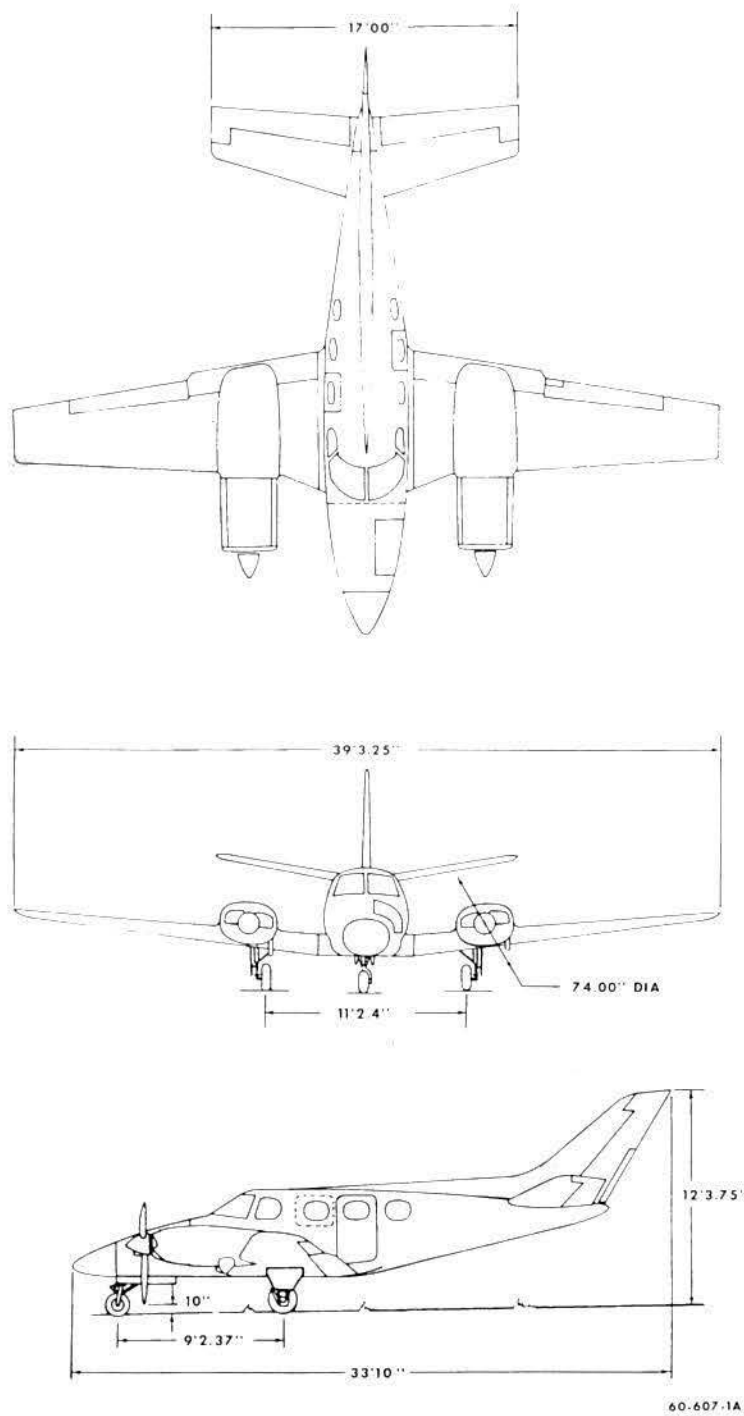


**Aircraft Dimensions
Figure 1**


**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

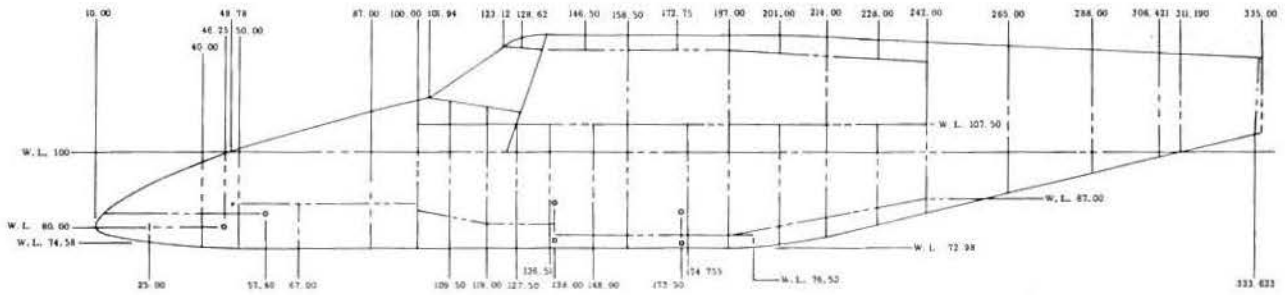


FUSELAGE

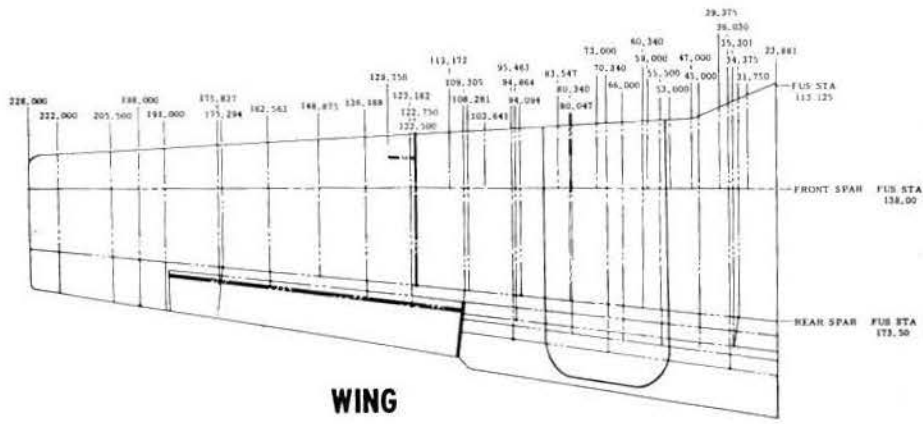

WING

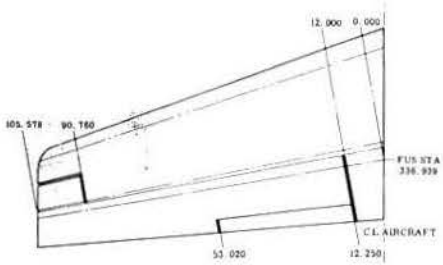

HORIZONTAL STABILIZER

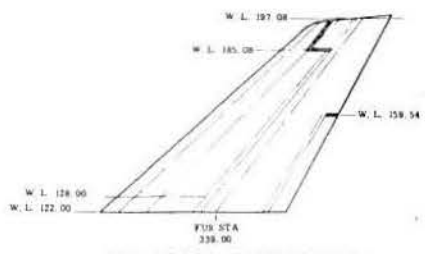

VERTICAL STABILIZER

60-603-10

Stations Diagram
Figure 2

"END"