

9 Towing & Taxing

**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

CHAPTER 9

LIST OF PAGE EFFECTIVITY

CHAPTER SECTION SUBJECT	PAGE	DATE
9-EFFECTIVITY/CONTENTS	1	Nov 2/73
9-00-00	201	Nov 2/73

CHAPTER 9 - TOWING AND TAXIING

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT	PAGE
GENERAL Maintenance Practices	9-00-00	201 201

"END"

**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

GENERAL - MAINTENANCE PRACTICES

Attach the hand towbar to the tow lug on the nose gear lower torque knee.

CAUTION

When towing with a tug, observe turn limits as

placarded on the nose gear to prevent damage to the gear.

CAUTION

Do not push on propeller or control surfaces. Do not place your weight on the horizontal stabilizers to raise the nose wheel off the ground.

"END"

